

ITEM	OWNER'S MANUAL		
FOR	OPTIMODI		
DESCRIPTION	SAME AS THE MODI, BUT WITH OPTICAL INPUT		
MODEL NO	SCH-08B	REV B	RANDOM NUMBER 010000000
NOTES	<p>THIS IS A MODI WITH OPTICAL INPUT. NOT USB. YES, WE KNOW, NOT TERRIBLY EXCITING. THAT IS, UNLESS YOU HAVE AN APPLE TV OR AIRPORT EXPRESS. WHICH ARE PERFECT FOR CONNECTING TO THE OPTICAL MODI. OR IF YOU USE A CD PLAYER. OR ANYTHING ELSE WITH OPTICAL OUTPUT.</p>		
 S C H I I T			AUDIO COMPONENTS

ITEM

OPTIMODI CONNECTIONS



1 Connect Modi's RCA outputs to your amp or preamp using high-quality RCA cables. Yes, you can use crappy ones too, as long as they work.


2 Connect your optical source (computer, Airport Express, AppleTV, CD player, transport, etc) to the Optical Modi's optical input, using a Toslink optical cable. It is very difficult to get any output without an optical connection.

3 Connect the supplied 16VAC wall-wart to the Optical Modi with the attached cord. Do not use different AC adapters, no matter how fractally perfect, cryogenically treated, or quantum aligned they are. Most wall-warts are DC output, and will not work with Modi.

4 Turn on the power and enjoy your music!

ITEM

OPTIMODI CONTROLS

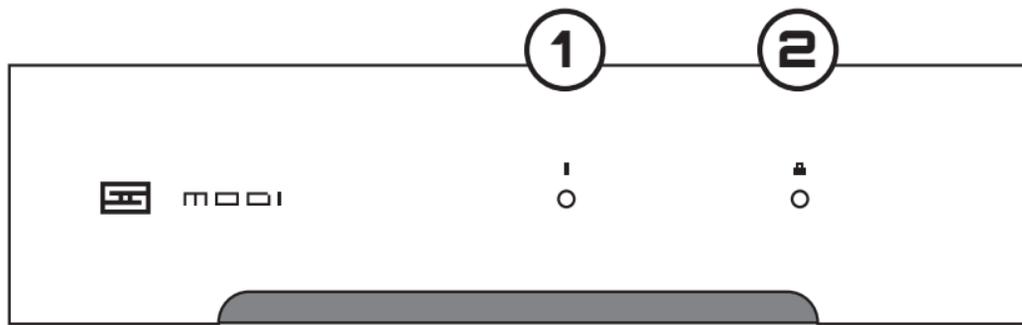

There are no controls. No, this is not one of those veiled “there is no spoon” references. The Optical Modi simply has no controls. Just two lights.

1 Left Light: when this is on, the optical Modi has been plugged in and turned on.

2 Right Light: when this is on, the optical Modi is receiving an optical datastream.

Both lights need to be on for you to hear music.

WHAT'S IN THE BOX

- | | |
|--------------------------------|--------------------------------------|
| (1) Modi, Optical Edition | (0) Airport Expresses |
| (1) Wall-Wart (very nice!) | (0) CD Players |
| (4) Stick-on feet (see above!) | (0) Any other optical output devices |
| (0) Apple TVs | (0) Magical optical cables |



Application for Council Directives 72/23/EEC, 89/336 EEC
Conformity declared for EN60065, EN55022 Class B, EN50082-1

2-YEAR LIMITED WARRANTY

Schiit Audio warrants to the original purchaser that this product shall be free from defects in material and workmanship for two (2) years from the date of purchase, with the sole exception of the tubes, which are covered by a 1-year warranty. If a defect covered by this warranty occurs during this period, Schiit Audio will repair the defective product, free of charge. Date of purchase will be based on customer receipts, otherwise date of manufacturing will be used.

If you believe you need warranty service, contact us first. Schiit Audio products sent back to us without a Return Authorization (RA) will be returned to the sender without repair. To contact us and obtain an RA, email tech@schiiit.com.

Warranty Limitations. This warranty shall not apply if a product: (a) is modified or tampered with; (b) is damaged by negligence, accident, unreasonably use, or other causes unrelated to defective materials or workmanship, or (c) has had the serial number altered or removed.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited in duration to the warranty period of 2 years. In no event shall Schiit Audio be liable for consequential or incidental damages resulting from the breach of any implied or expressed warranties. Some state do not allow these limitations, so they may not apply to you. You may also have other rights which vary from state to state or province to province.



S C H I I T

SCHIIT.COM
TECH@SCHIIT.COM